

Latching Solenoid Part No. 16305 Installation Instructions

Contact Us

Headquarters

Storm Manufacturing Group
23223 Normandie Avenue,
Torrance, CA 90501

Customer Service

Phone: (800) 210-2525
Toll-Free Fax: (800) 997-0500
Fax: (310) 326-8310
Web: www.bucknersuperior.com



Form:F-SMG-066 REV NC



Part No. 16305 (latching solenoid) Installation Instructions

For proper function of solenoid follow installation instructions.

- 1.1. Install solenoid onto valve.
- 1.2. Connect solenoid wire lead to DC irrigation controller terminals.
- 1.3. Power cycle the solenoid to ensure plunger retracts to OFF position. (Sometimes, solenoid plunger is held in maintaining it at the ON position during installation)

- 1.3.1. ON position is displayed in Figure 1. notice the plunger is held in.



Figure 1.

- 1.3.2. OFF position is displayed in Figure 2. notice the plunger is protruding.



Figure 2.

- 1.4. With water flowing through the valve, power solenoid On and Off to ensure the valve functions properly.